

Flowcode

using PPP with Flowcode v5

To allow PPP to work with Flowcode 5 click on Build >> Compiler options and navigate to the Programmer tab.

Set the Programmer location to:

32bit Operating Systems

C:\Program Files\Flowcode\v5\Tools\PPP\PPPv3.exe

64bit Operating Systems

C:\Program Files (x86)\Flowcode\v5\Tools\PPP\PPPv3.exe

Set the Programmer parameters to:

-cs 2 -chip PIC%p -nogui "%f.hex"

To allow PPP to provide configuration settings simply leave the Use external program to set config options setting ticked and leave the details as.

Location

32bit Operating Systems

C:\Program Files\Flowcode\V5\Tools\PPP\PPPv3.exe

64bit Operating Systems

C:\Program Files (x86)\Flowcode\V5\Tools\PPP\PPPv3.exe

Flowcode

Parameters

-cs 2 -chip PIC%p -config

You should now be able to use the PPP programmer via Flowcode.

Unique solution ID: #1052

Author: DavidA

Last update: 2015-03-31 17:27